



For CTC GSi 12, CTC EcoHeat 400, CTC EcoZenith i250/i350, CTC EcoLogic Pro and CTC EcoZenith i550 Pro with software version from 20141120.

## First Login - Sign up

- Click **Sign up**.
- Select **Language**.
- Enter your **Email** and a **Password** for Login.
- Click **Sign up**.

Sign up New user Close

Language English

Email Your e-mail

Password At least 5 characters

Repeat password Repeat password

Sign up



## Settings - Add new system

- Create a **Name** for the heating system.
- Enter the **Serial number** (stated on the Internet module).
- Press **Add**. If you want to include multiple heating systems then repeat the procedure.

Additional users are able to access the system by using the same log in details.

You can activate and deactivate the heating systems. To do this, use the slider and press Save to confirm with the heating system.

If adding a new heating system fails, the system will still be listed under **Settings/My heating systems**. Try to activate again and save from there. A non-active system is not working.

In the picture the My heating system is activated.

Settings CTC

Language English

**My heating systems**

My heating system 8310116480742  Save

Delete heating system

**Add new system**

Name Summer house

Serial number 831015270207

Add

## Menu

Slide the page to the right or click on  to access the menu tree.

Menu

- My account
- Heating system
- Operation data
- Alarm
- Settings
- Help

Lan

My

Test 0048

Add

Nan e.g "

Pho To th



## My account

Manage your account details, E-mail and Password.

The screenshot shows the 'My account' settings page. At the top right, there is a 'My account' header with the CTC logo. Below it is a section titled 'Edit account data' with input fields for 'Email' and 'Password', and a 'Change email' button. Another section titled 'Change password' has input fields for 'Current password', 'New password', and 'Confirm new password', with a 'Change password' button. At the bottom right, there is a 'Logout' button with an external link icon.



## Heating system

At the top right corner, select which heating system Settings are to be displayed. Below are the current outdoor temperature, Hot water settings or settings for Vacation Mode. Click on a row to change the set-point.

Below Heating system the temperature of each room is displayed. Click on a row to change the set-point.

If you made changes and want to save them, select Save Settings.

The screenshot shows the 'Heating system' settings page. At the top right, there is a 'Heating system' header with the CTC logo. Below it is a 'Choose system' dropdown menu set to 'TestVp'. A 'General' section contains 'Outdoor temp.' (0 °C), 'Hot water' (60 °C), and 'Vacation mode' (Not active). A 'Heating system' section lists 'Room 1' (20°C), 'Room 2' (21°C), and 'Room 3' (22°C). At the bottom, there is a refresh icon and the text 'Updated 23 minutes ago'.



## Operation data

At the top right corner, select which of the heating system Operation data is to be displayed. See your installation- and maintenance manual for a detailed description of those parameters.

The screenshot shows the 'Operation data' page. At the top right, there is an 'Operation data' header with the CTC logo. Below it is a 'Choose system' dropdown menu set to 'TestVP'. The page displays various parameters: 'Outdoor temp' (0 °C), 'Vacation mode' (0 days), 'Temperature Room 1' (20 °C), 'Temperature Room 2' (21 °C), 'Temperature Room 3' (22 °C), 'Heat. Sys. 1 Prim. Flow' (47 °C), 'Heat. Sys. 2 Prim. Flow' (36 °C), and 'Heat. Sys. 3 Prim. Flow' (28 °C). At the bottom, there is a refresh icon and the text 'Updated 23 minutes ago'.



## Alarm

To see the latest alarms, the alarm list must be manually updated.

Some of the alarms can be reset from here.

The icon turns red if an alarm has occurred.

The screenshot shows the 'Alarm' page. At the top right, there is an 'Alarm' header with the CTC logo. Below it is a 'Choose system' dropdown menu set to 'TestVP'. A section titled 'Active alarms' shows a checkmark and the text 'No active alarms' with a timestamp '2014-11-21 11:54'. At the bottom, there are two buttons: 'Update alarm list' and 'Reset alarms'.

